

# Beldray<sup>®</sup> Est 1872

Nobody Does It Better

## Convactor Heater Instruction Manual



THE **SCIENCE**  
BEHIND CLEAN



[www.beldray.com](http://www.beldray.com)

Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or perform user maintenance.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep furniture, curtains and other flammable material at least 1 metre away from the appliance.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the appliance or plug in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use this appliance in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the appliance unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use this appliance for extended periods of time.

Do not use the appliance for anything other than its intended use.

Do not cover this appliance.

Do not block the air intake of the appliance; place in an open, well-ventilated space.

Do not use this appliance outdoors.

Do not attempt to move the appliance whilst it is in use.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the appliance on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

The appliance should be used on a stable, heat resistant surface.

The appliance must not be located immediately below or next to a mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use, any cleaning or maintenance. Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the appliance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

**Note:** When using this appliance for the first time a slight odour may be emitted, this is normal and will soon pass; ensure that there is sufficient ventilation.

**Warning:** In order to avoid overheating, do not cover the appliance.

**Warning:** Normal voltage is still present in this appliance as long as the appliance is connected to the electrical source. Always unplug the appliance when not in use.

**Caution:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

**Caution:** In order to avoid a hazard due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit that is regularly switched on and off by the utility.



**Caution:** Hot surface. Do not touch the hot section or the heating components of the appliance.

## **Getting Started**

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## **In the Box**

Convector heater

4 small screws

4 large screws

4 wall plugs

4 wall brackets (2 left, 2 right)

2 moulded feet

Instruction manual

## **Features**

2000 W

3 heat settings 750 W/1250 W/2000/ W

Overheat protection

Thermal cut-out device

Adjustable thermostat

Portable with carry handle

## Description of Parts



## Instructions for Use

### Before First Use

When using this Convecter Heater for the first time, a slight odour may be emitted. This is normal and will subside after a few uses.

Place the Fan Heater on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials. Check that the air intake on the rear of the Fan Heater is not blocked.

### Setting Up the Convecter Heater to Free Stand

**STEP 1:** Attach the two moulded feet to the base of the Convecter Heater with the 4 small screws provided, using a Philips screwdriver.

**STEP 2:** Place the Convecter Heater on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials.

**STEP 3:** Ensure that the air intake on the base of the Convecter Heater is not blocked.

## Wall Mounting the Convection Heater

- STEP 1:** Choose the desired position for the Convector Heater, ensuring that it is at least 1 metre away from furniture, curtains or any other flammable materials.
- STEP 2:** With a pencil, make two marks on the wall 418 mm apart. Use a spirit level to guarantee that the marks are level and that they allow sufficient space between the bottom of the Convector Heater and the floor.
- STEP 3:** Check that the air intake of the Convector Heater is not blocked.
- STEP 4:** On the underside of the Convector Heater, fit two of the wall brackets (one left and one right) to the inner hole at the rear using two of the small screws, ensuring that the bracket faces downwards.
- STEP 5:** Drill and plug the wall where the two marks have been made and then screw the other two brackets provided into the wall, using the two large screws. Check that the left and right brackets face inwards towards each other and that the slots on the arms of the wall brackets face upwards.
- STEP 6:** Hold the Convector Heater at both sides and carefully slide it onto the wall mounted brackets, until it slots into position on the mounting slots.
- STEP 7:** On the wall, mark the positions for where the lower brackets will lie against the wall, then remove the Convector Heater from the upper brackets. Drill and plug where the two marks have been made and then screw the brackets provided into the wall.

## Using the Convection Heater

Plug Convector Heater into the mains power supply.

To operate the Convector Heater on a medium power setting (1250 W), turn on the top switch only. To operate on a lower power setting (750 W), turn on the lower switch only. To operate at the highest power setting (2000 W), turn on both switches together.

The adjustable thermostat can be used to finely regulate the temperature. Turn the adjustable thermostat clockwise to increase the heat output and anticlockwise to reduce it.

**Note:** The heat indicator lights for each switch will illuminate whilst the Convector Heater is warming up and will cycle on and off during use to show that the correct temperature is being maintained.

## Care & Maintenance

Always unplug the Convector Heater from the mains power supply and allow to cool sufficiently before performing any cleaning or maintenance.

Wipe the Convector Heater with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the Convector Heater.

Do not immerse the Convector Heater in water or any other liquid.

## Storage

Store the Convector Heater in a cool, dry place.

## Specifications

Product code: EH0576

Voltage: 220 – 240 V ~ 50 Hz

Power: 2000 W

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL wire and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS POWER SUPPLY and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

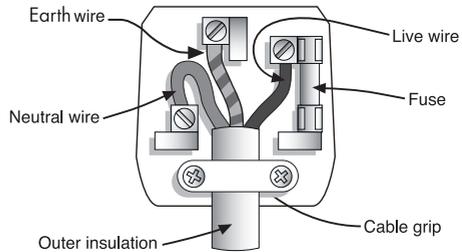

## UP Global Sourcing

Victoria Street, Manchester, OL9 0DD, UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240\*

\*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



