

Beldray

Est 1872

Nobody Does It Better

Steam Station Instruction Manual



THE **SCIENCE**
BEHIND CLEAN



www.beldray.com

Safety warnings

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, if there is any leakage or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not direct steam at people or animals.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Keep the appliance away from flammable materials.

Warning: Danger of scalding.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.



Caution: Hot Surface.

Getting Started

Remove the appliance from the box.

Remove all of the packaging from the appliance.

Place the packaging inside of the box and either store or dispose of safely.

In the Box

Steam Station

Instruction Manual

Features

2000 W power

Steam ready

700 ml removable water tank

Continuous refill system

Low level water indicator

Continuous and vertical steam functions

1.9 m power cord

Cord storage

Stainless steel soleplate

Description of parts



- | | | |
|--------------------------------|------------------------------------|---------------------------|
| 1. Iron | 6. Temperature control dial | 10. Power indicator light |
| 2. Stainless steel sole plate | 7. Heat ready indicator light | 11. Cord storage lock |
| 3. Continuous steam jet button | 8. Low water level indicator light | 12. Steam hose |
| 4. Steam button lock | 9. On/Off switch | 13. Base unit |
| 5. Trigger/Steam button | | 14. Removable water tank |
| | | 15. Water fill entrance |

Instructions for Use

Ensure that the Steam Station is unplugged from the mains power supply.

Remove the water tank from the Steam Station main body by grasping the water fill entrance and gently but firmly pulling it out. Fill the water tank with tap water up to the Max. level marked on the front of the tank. Once full, replace the water tank back onto the Steam Station main body until it clicks into position.

Connect the Steam Station to the mains power supply.

To begin using the Steam Station, press the 'On/Off' switch. The power indicator light will flash to indicate that the boiler is heating up.

Select the temperature of the Steam Station by turning the temperature control dial on the iron to the desired heat setting.

When the Steam Station has reached the correct temperature, the power indicator light will stop flashing and will remain lit; when the heat ready indicator light turns off, the Steam Station is ready for use.

If the low water level indicator light flashes and an audible noise is emitted, the water level in the tank is too low and the water tank will need refilling according to the instructions provided.

Note: It is possible to fill the water tank whilst it is still attached to the Steam Station main unit by directly pouring water into the water fill entrance.

Note: This Steam Station is designed for use with tap water. If the water in your area is particularly hard, please use demineralised water to protect the internal parts of the Steam Station from limescale build-up.

Note: If the temperature required for a particular garment is not specified, it is recommended to iron at the lowest heat setting and then increase if necessary, in order to avoid damage to the material.

Tip: Before use, separate the clothes to be ironed by ironing temperature, starting at the coolest setting, as the iron will heat up faster than it will cool down.

Steam Ironing

When steam ironing for the first time, it is recommended to iron a plain cloth to test that the iron is working at the correct temperature.

To use the steam setting, press the trigger/steam button on the underside of the iron handle.

This will provide steam up until the button is released. The continuous steam jet button can be locked down in order to provide continuous steam by sliding the steam button lock towards the rear of the iron.

Vertical Steam Ironing

Vertical steam ironing is especially useful when removing creases from hanging fabrics, such as curtains, wall hangings and certain clothes.

To use the vertical steam function, hold the iron approximately 1–2 cm away from the fabric to be steamed, and then press and hold the steam button on the underside of the iron handle and direct the iron soleplate at the area to be steamed.

Ironing Guide

Fabric	Temperature Control Dial Setting	Instructions
Acetate Nylon Acrylic	•	Do not use steam to iron these fabrics. Always follow the instructions on the garment labelling. As a guide, these fabrics usually require a very low heat setting.
Polyester Rayon	•	Do not use steam to iron these fabrics. Iron the garments inside out to protect the surface of the fabric and select the lowest heat setting.
Silk	••	Do not use steam to iron these fabrics. Iron the garments inside out to protect the surface of the fabric.
Wool Light cotton Light linen	••	These fabrics can be ironed using the steam setting. Iron the garments inside out to protect the surface of the fabric. To avoid creating a shiny finish, it is recommended to place a thin cloth over the fabric to be ironed.
Cotton Fine linen Starched fabric	•••	These fabrics can be ironed using the steam setting. Before ironing, lightly dampen the fabric. Heavier and starched fabrics can be ironed directly onto the outside of the fabric. Darker colours and embroidered garments should be ironed inside out to protect the surface of the fabric.
Linen	•••	These fabrics can be ironed using the steam setting. Use plenty of steam. Darker colours should be ironed inside out to protect the surface of the fabric. Iron lapels on the right side for a better finish.

Cleaning and maintenance

Always unplug the Steam Station from the mains power supply before attempting any cleaning or maintenance.

Ensure that the Steam Station has completely cooled before cleaning, as it gets extremely hot during use.

Wipe the Steam Station and sole plate clean with a soft, damp cloth.

Always empty the water tank after each use.

Do not use abrasive cloths or scourers to clean the Steam Station or sole plate.

Never immerse the Steam Station in water or any other liquid.

Storage

Before storing the Steam Station, ensure that the water tank has been emptied and that it is cool, clean and dry.

Ensure that the power supply cord is correctly stored in the cord storage on the base of the Steam Station. The power supply cord will wrap around the Steam Station main body and can be locked into position once wrapped by pressing the cord storage lock downwards.

Never wrap the cord tightly around the Steam Station; wrap it loosely to avoid causing damage.

Store in a clean, dry place.

Specifications

Product code: BEL0207

Voltage: 220 – 240 V AC

Frequency: 50 Hz

Power: 1830 – 2000 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

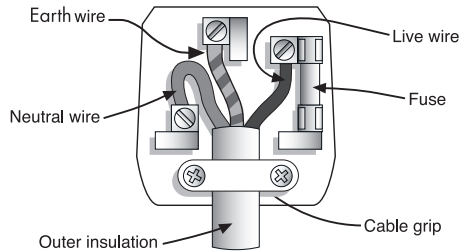

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Imported and Distributed by:
UP Global Sourcing,
Victoria Street,
Manchester OL9 0DD. UK.

Please retain all instructions for future reference.
Made in China.
CD090414/MD000000/V1