

# Beldray

Est 1872

Nobody Does It Better

## Electric Blanket Instruction Manual



THE **SCIENCE**  
BEHIND HEAT

Please read all instructions carefully and retain for future reference.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Electric blanket with controller

Instruction manual

## Features

Two heat settings

Overheat protection

Machine washable

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage on the rating plate matches your local network before plugging in.

This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the appliance. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.

Do not use the appliance with young children under the age of three, the infirm or any person who is insensitive to heat or is unable to react to overheating.

This appliance is not to be used by young children over the age of three, unless the controls have been preset by a parent or guardian, or if the child has been adequately instructed on how to operate the controls safely.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not a toy.

This appliance contains no user serviceable parts. Only a qualified electrician should carry out all repairs. Improper repairs may place the user at risk of harm.

This appliance should not be operated by means of an external timer or separate remote control system.

Avoid extended use of this appliance as a build-up of heat could cause overheating of the body (heatstroke).

This appliance is not intended for use in hospitals.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Ensure the blanket is NOT too small or big for the bed. The correct sized blanket should be used at all times.

Do NOT allow the heating wires to lie over the edge of the mattress.

Avoid creasing the appliance.

Do not use the appliance folded or tucked in.

Do not use if wet.

Do not insert pins into the appliance.

Do not use this appliance on an adjustable bed.

Do not pinch, flex or expose the heating wire, as overheating and/or personal injury may occur.

Do not dry clean the appliance.

Do not use bleach or harsh cleaning detergents as they may damage the heating element.

Do not use the appliance for anything other than its intended use.

Always use the lowest heat setting when the bed is occupied.

The appliance should not be left on overnight or for a long period of time.

Keep pets away from the appliance.

When not in use, always turn off the appliance and unplug it from the mains power supply. Allow it to cool fully before folding.

Examine the appliance frequently for signs of wear or damage; if the appliance has been misused, does not work or shows signs of damage, return it to the supplier before switching it on again.

## Description of Parts



## Instructions for Use

### Basic Start-up Guide

Your blanket is designed to be used as an under blanket only.

It is recommended that you connect your blanket to the mains power supply via a 30mA RCD protection device.

Fit the blanket to your bed with the controller positioned at the bed head and smooth to remove any creases.

The controller has three positions:

- |   |           |
|---|-----------|
| 0 | Off       |
| 1 | Low heat  |
| 2 | High heat |

Connect the blanket to the mains power supply and switch it on.

Select the required heat setting to preheat your bed and switch off when the heat is no longer required. Do not sleep with the controller set to the maximum heat setting. Unplug the blanket from the mains power supply when it is not in use.

### Care and Maintenance

Before attempting any cleaning or maintenance, disconnect the controller from the blanket using the retaining clip on the connector and unplug the blanket from the mains power supply. Your blanket has waterproof heating elements making it safe to immerse in water and wash by hand. Always remove the controller first; do not allow any part of the controller to be immersed in liquid. Never have your blanket dry cleaned.

### Hand wash

After you've disconnected the controller, immerse the blanket in water and wash by hand. Always ensure that you have removed the controller first; do not allow any part of the controller to get wet.

### Machine wash

Once you've detached the controller, the blanket can be cleaned in a washing machine (size permitting). Wash your blanket on a Wool or Delicates cycle with a neutral detergent or mild soap powder at a maximum temperature of 40°C. Do not use high speed or extra spin cycles.

### Drying

Drape your blanket over a clothes line and allow it to dry naturally; do not use pegs to secure the blanket.

Never use any form of direct heat to dry your blanket such as radiators, heaters or hair dryers. Ensure that your blanket is completely dry before reconnecting the controller and refitting on your bed.

### Troubleshooting

Symptom	Possible Cause	Solution
The blanket is not heating.	It may have a failed fuse.	Check the fuse by replacement.

### Technical Specification

Supply: 220-240V~ 50Hz

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

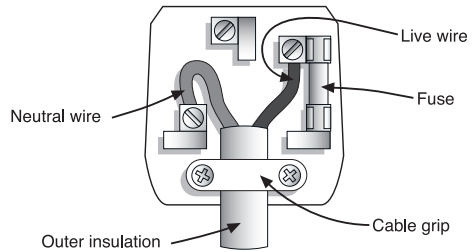

## UP Global Sourcing

Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



