

Beldray

Est. 1872

Nobody Does It Better

USB Mini Fan

Instruction Manual



THE **SCIENCE**
BEHIND COOL

Please read all instructions carefully and retain for future use.

Getting Started

Remove the USB fan from the box.

Remove all packaging from the fan.

Place the packaging inside the box to store or dispose of safely.

In The Box

USB fan

USB power lead

Instruction manual

Features

High Speed

90 degree angle tilt

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it or the power cord has been damaged in any way.

Do not use near heating appliances such as stoves or open flames.

When plugging in or unplugging the USB cable, make sure to grasp it by the plug.

Do not submerge in water or other liquids.

Do not use near any location where organic solvent or gas is being used.

Do not use in the bathroom, near a sink or other places where water is used often such as a kitchen.

Do not use without the fan guard.

Place on a stable surface.

Do not use outdoors.

Warning: do not cover this appliance.

Do not use the unit with wet hands.

Do not insert fingers or other objects inside the fan guard.

Keep the unit free from dust, lint etc.

Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This appliance is not a toy.

The appliance must be unplugged from the power supply after use and whilst any maintenance such as cleaning is carried out.

This appliance contains no user serviceable parts. All repairs should be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
Do not leave the appliance unattended whilst connected to the mains supply.
Do not block the rear intake.
Keep fingers, hair, loose clothing etc. away from the rotating blades

Description of Parts



Instructions for Use

Set the switch to "0" (Off) position

Insert the USB plug into the USB port of the computer or other device. Pay attention to the position of the plug, forcing it may damage or break it.

When positioning the fan, you can adjust the direction of air flow in a 90 degree range between vertical and horizontal.

Once in position switch the fan to "I" (On).

Do's and Don'ts

Do not cover this appliance.

Do not block the rear intake of the appliance.

Do not immerse this appliance in water or any other liquids.

Troubleshooting

If the blades fail to revolve:

Check to make sure that the USB cable is plugged in securely.

Make sure the device the fan is connected to is turned on, the fan will not work otherwise.

If you are using a USB hub there may be too much power draw from that port, switch to a USB port directly connected to the device.

Care and Maintenance

Always disconnect the appliance from the mains power supply and wait until the fan has stopped completely before cleaning.

Clean the appliance with a soft, damp lint free cloth. Allow to dry thoroughly before using the appliance again.

Do not use abrasive cleaning solvent or scouring pads to clean the fan.

Specification

Interface: USB 2.0/3.0

Electric power supply: DC5V (fixed) 500mA or above (supplied from USB port)

UP Global Sourcing

Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



