

Instruction Manual



EH0221

Arched Glass Electric Fireplace

Please read these instructions thoroughly before use and retain for future reference.

Important Safety Instructions

When using this electrical appliance, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to person, including the following:

This appliance must be used on an AC supply only and the voltage marked on the heater must correspond to the supply voltage.

Do not switch the appliance on until it is properly installed as described in this manual.

The appliance must not be located immediately below a socket outlet.

Keep furniture, curtains and other flammable material at least 1 meter away from the appliance.

Do not leave the appliance unattended during use.

Do not leave the appliance unattended whilst connected to the main supply.

This appliance is intended for household use and should not be used for commercial purposes.

From time to time, check the cord for damage. Never use the appliance if the cord or any part of the appliance shows signs of damage.

Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.

Repairs to electrical appliances should only be performed by a qualified electrician.

Improper repairs may place the user at serious risk.

Do not run the main cable under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not allow the main cable to hang over sharp edges or come into contact with hot surfaces.

Only operate this appliance on a flat, stable, heat-resistant surface.

Never immerse the appliance in water or any other liquid.

Do not use the appliance outdoors.

Do not use if you have wet hands.

Never use the appliance on or near hot surfaces.

Before cleaning the appliance, ensure it is unplugged from the power and that it is completely cooled.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user or damage to the appliance.

Do not lift the appliance by the front panel.

Examine the wall you want to install the mount to before you start installation. Make sure that there are not hidden power supply cables, water pipes or other objects hidden in the wall that might be hit by the drill.

Make sure that the wall is capable of supporting the combined weight of the appliance. If necessary have a qualified technician to reinforce the wall.

At least two people with technical knowledge and experience are needed to install this product. Contact a qualified technician if you do not understand these instructions or parts of it, if you have doubts and if you do not have required tools in hand.

Do not cut off bracket or change shape of the bracket.

Do not use the appliance in the immediate surroundings of a shower, bath or a swimming pool.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

Warning: In order to avoid overheating, do not cover the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Warning: This appliance is not equipped with a device to control the room temperature. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose properly.

Serial Number	Name	Quantity
001	Carton	1
002	Screws (4 x 8mm)	2
003	Screws (4 x 35mm)	2
004	Fixed Angle	1
005	Plastic plug (8mm)	2
006	Packing left bubble	1
007	Fireplace	1
008	Bracket	1
009	Plastic plug (8mm)	5
010	Screws (4 x 35mm)	5
011	Remote control	1
012	Packing right bubble	1
013	Power cord	1

Please be careful while drilling the holes.

Helpful Advice Before Fitting

Please retain all packaging until you have checked and counted all the parts and the contents of the fixing pack against the parts list.

The fixing pack contains small items which should be kept away from young children. We suggest that you open the fixing pack and place all the contents into a container, therefore reducing the risk of losing any small pieces.

Installation

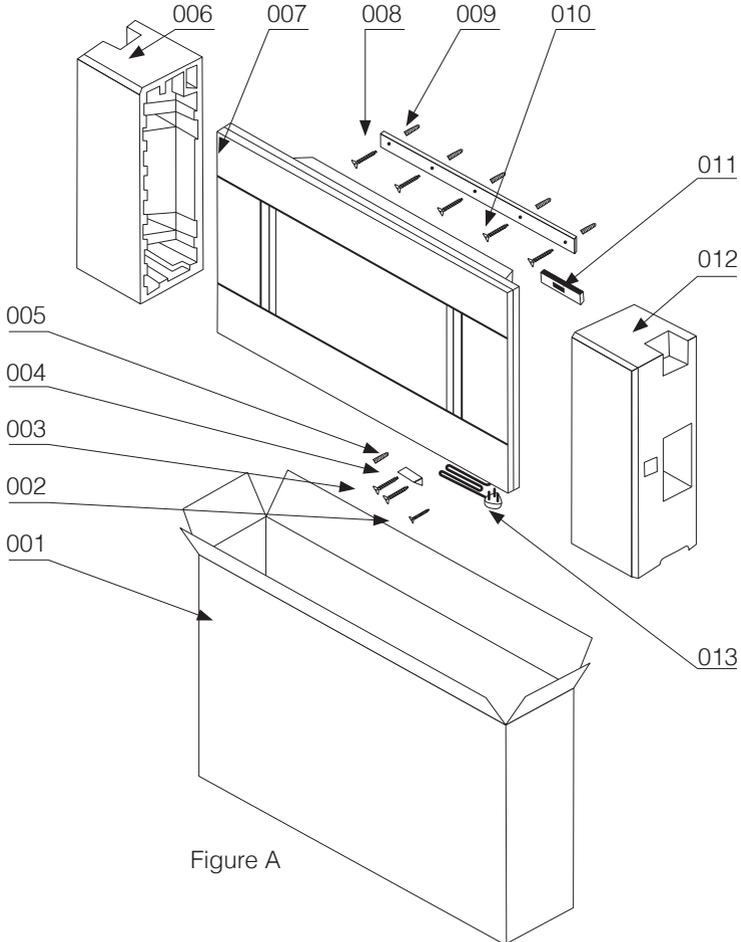


Figure A

Do not connect the appliance until it is properly fixed to the wall and the instructions are read and understood fully.

The minimum distances must be observed.

For installation of the appliance, care must be taken not to damage concealed cables.

This appliance is designed to be permanently fixed to a wall at a minimum height of 600mm. The wall bracket must be fitted horizontally and the cable routed to the bottom right of the heater.

A height of 600mm from bottom of heater to floor is recommended for optimum viewing of fuel bed see fig.1 for recommend fixing dimensions.

Use the bracket as template and mark five drill positions on the wall.

Make sure that these holes are level. Observe the recommended fixing dimensions (Fig. 2).

Put the bracket aside and drill holes with a depth of 35 mm using an 8 mm drill bit.

Clean the holes of dust and insert one plug in each hole. Make sure the edge is flush with the surface.

Hold the bracket in position and fix it with screws.

Attach the fixing angle to the bottom of the appliance using the short screws.


Carefully lift the appliance and hook it to the wall bracket (Fig. 2, circle). Do not let the appliance go until you are sure it is safely engaged to the bracket.

Now mark the hole position for fixing the angle (Fig. 3). Carefully remove the appliance from the bracket and drill holes with a depth of 35 mm using an 8 mm drill bit.


Clean the holes of dust and insert one wall plug in each hole. Make sure the edge is flush with the surface.

Then lift up the appliance again, engage it to the bracket and finally fix the angle

Fig 1

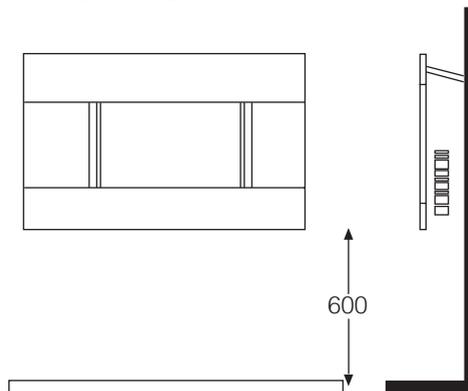


with screws.

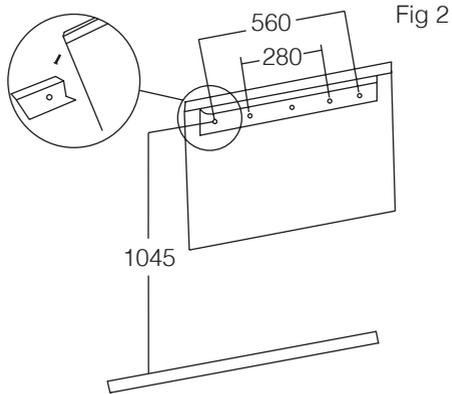

Fitting the Feet

The box contains two plastic feet and four screws for each foot. Place the fireplace on a flat, stable surface with the back of the fireplace resting on the surface. Push the feet onto the base of the fireplace and fit the screws in place. Stand the fireplace up and ensure that it is placed at least 15cm away from the wall.

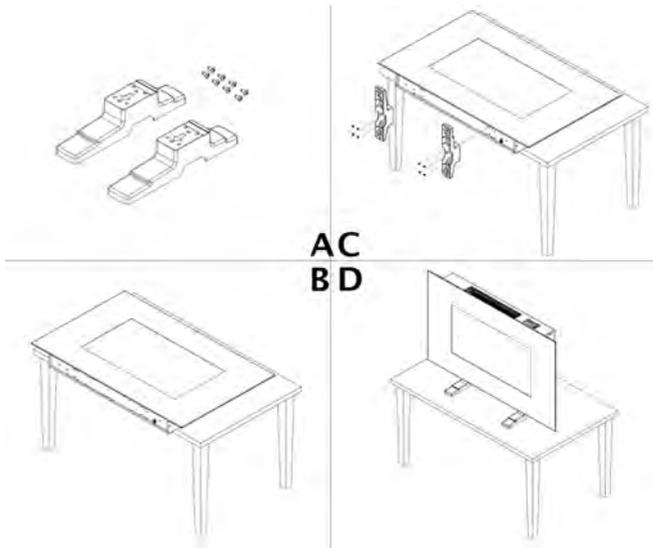

Instructions for Use

The fireplace can be operated either by the switches (located on the top right hand side of the fireplace) or by the supplied remote control.

Manual Operation

The switches are located at the top right hand side of the fireplace. The standby switch must be switched on first.

Press the  button once to turn on the appliance and fire effect. A red indicator light will appear to indicate that the function is on.

Press the 750W button once for the low heat setting; press again to switch it off.

Press the 1500W button once for the high heat setting; press again to switch it off.

Remote Operation

The standby switch located at the top right hand side of the fireplace must be switched on first.

It takes some time for the receiver to respond to the transmitter. Do not press the buttons more than once within two seconds for correct operation.

Press the  button once on the remote control. This turns on the appliance and fire effect.

Press the 750W button once for the low heat setting; press again to switch it off.

Press the 1500W button once for the high heat setting; press again to switch it off.

Safety Cut-Off

This appliance is fitted with a safety cut-off which will operate if the fireplace overheats (e.g. due to blocked air vents). For safety reasons, the fireplace will NOT automatically reset.

To reset the appliance, disconnect it from the main power supply for at least 15 minutes.

Reconnect the supply to the main power supply and switch on the appliance.

Battery Safety

Do not mix alkaline, standard (carbon zinc) and rechargeable batteries (nickel hydride).

Do not mix old and new batteries.

Non-rechargeable batteries should not be recharged.

Rechargeable batteries should be removed from the fireplace before being charged (if removable).

Rechargeable batteries should only be charged under adult supervision (if removable).

Exhausted batteries should be removed.

Only batteries of the same or equivalent type as recommended are to be used.

The supply terminals should not be short circuited.

Batteries are to be inserted according to the correct polarity.

Do not dispose of batteries in a fire.

Troubleshooting

Symptom	Solution
No operation/no fan.	Check the fuse in the plug. Replace if necessary. The safety cut-off may have operated. Please allow it to cool down for 15 minutes, then switch it back on.
No fire effect light.	Check if the LED's are working.

Cleaning

Warning: Always disconnect from the power supply before cleaning the fireplace. For general cleaning, use a soft, clean cloth; never use abrasive cleaners or materials (such as scourers, etc.). The glass viewing screen should be cleaned carefully with a soft cloth. DO NOT use proprietary glass cleaners.

Technical Specification

Supply: 120V-60Hz

Rated power: 1500W

Remote control: 2 x 1.5V AAA batteries (not included) should be inserted correctly according to the polarity markings indicated in the batter compartment.

Lighting: 0.5W LED Lamp

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:

Rite Aid,
30 Hunter Lane,
Camp Hill,
PA 17011