

Beldray

Est. 1872

Nobody Does It Better

Bladeless Fan Instruction Manual



THE **SCIENCE**
BEHIND CLEAN

Getting Started

Remove the appliance from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Fan

Adaptor

Instruction Manual

Features

Variable Fan Speed Control

Oscillation Function

Timer Function

Safety Instructions

When using electrical appliance, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety. This product is not a toy. Children should be supervised to ensure they do not play with the appliance.

If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

This appliance is not intended to be operated by means of an external timer or separate remote-control system.

The fan should only be connected to the mains using the adaptor provided.

Do not immerse the appliance in water or any other liquids.

Do not use the appliance outdoors.

Do not use the appliance with wet hands.

Close supervision is required when using this appliance near children.

Never leave the appliance within reach of children.

Do not push objects into any openings.

Warning: do not cover this appliance.

Do not block the air intake or any other openings.

Never insert fingers or any other objects through the grille while the appliance is operating.

This appliance contains no user-serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.

Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.

Do not leave the appliance unattended whilst connected to the mains power supply.

The mains adaptor must be unplugged from the power supply after use and whilst any maintenance such as cleaning is carried out.

The appliance must be used on a stable surface away from windows.

Do not use the appliance for any other purpose other than that for which it is designed.

Ensure the supply cord is kept away from heat or sharp edges that could cause damage.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Description of Parts



Instruction for Use

Place the fan in an open space away from windows to avoid rain getting into the appliance.

Do not cover the appliance; keep clear of curtains, bedding etc.

Connect the DC plug of the mains adaptor to the DC plug socket on the fan base.

Connect the mains adaptor to the mains outlet socket.

Rotate the On/Off/Speed control button in a clockwise direction to the power on position (0) to turn the fan on. The indicator light will illuminate.

Further rotate the On/Off/Speed control button in a clockwise direction to set the desired fan speed. When you reach the "Max" position, do not rotate the button further. Rotate the button in anticlockwise direction from the (0) position to turn the fan off – the indication light will go out.

Press the oscillation button once to start the oscillation function; press the button a second time to turn the oscillation function off.

Press the timer button once to start the timer function, the indicator light will flash continuously. The fan will turn off after about 60 minutes and the indicator light glow red. To stop the timer function, press the timer button a second time.

Do's and Don'ts

Do not cover the appliance.

Do not block the air intake of the appliance.

Do not immerse the appliance in water or any other liquids.

Do not overturn the On/Off/Speed control button.

Do not twist the fan base as this will damage the oscillation function.

Care and Maintenance

Always disconnect the appliance from the mains power supply and wait until the fan has stopped completely before cleaning.

Clean the appliance with a soft, damp, lint free cloth – allow to dry thoroughly before using the appliance again.

Clean the air blowing outlet and air intake frequently to make sure it is not blocked.

Ultimate Products Ltd.

Manor Mill, Victoria Street, Chadderton, Oldham, OL9 0DD

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



