

Beldray

Est. 1872

Nobody Does It Better

Air Cooler, Humidifier and Purifier

Instruction Manual



THE **SCIENCE**
BEHIND COOL

Getting Started

Remove the appliance from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Air Cooler

2 x Freezer Packs

Instruction Manual

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure they do not play with the appliance.

Do not operate the appliance with wet hands.

Do not unplug the appliance from the mains power supply while the unit is running.

The use of an extension lead is not recommended.

Do not insert fingers, sticks or any other objects into the unit.

If a bad odour is emitted from the appliance, turn the unit off and unplug from the mains power supply.

If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Do not cover the air inlets or outlets.

Do not locate the appliance directly underneath an electrical socket.

Do not use this appliance near a bath, shower or swimming pool.

Do not use the appliance near flammable or explosive gas.

To disconnect from the mains power supply, pull directly on the plug; do not pull on the power cord.

Empty the water tank and unplug from the mains power supply before storing the appliance.

Do not wash the appliance using water or chemical solvents.

Turn off the appliance, unplug from the power supply and use a dry cloth for cleaning.

Do not shake the appliance.

Do not spray insecticide or chemical solvents on the appliance.

Always unplug from the mains power supply when not in use.

Description of Parts




Multi-speed easy to use button function



Timer function

for cool air when you need it

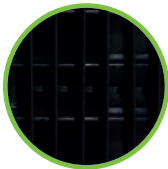

Oscillating function

to direct cool air where you need it



360° wheels for easy manoeuvrability



Carry handles for easy manoeuvre



4 litre tank capacity

so you don't have to empty it too often

Instructions for Use

Control panel

Timer: turn the timer from 0 minutes to a maximum of 120 minutes.

Cool: the pump will pump water to the cooling pad.

Note: add clean water to the tank before using the COOL mode and observe the water level through the transparent window to control the water volume. Note: the drain stop should be closed tightly.

Do not fill the tank above the Max. fill level or below the minimum fill level.

Wind: airflow will automatically oscillate from left to right.

Air Flow

Press the Speed button on the control panel to select fan speed as below:

Hi: Strong

Mi: Medium

Lo: Slow

Press the Wind button on the control panel and the airflow will automatically oscillate from left to right.

To regulate the airflow up or down, adjust the front louvers manually.

Cleaning and Maintenance

The filter is supplied ready assembled.

The filter should be cleaned or replaced after a certain period of use.

Hold the filter frame at the top and push down the two clips to open the filter frame.

Remove the filter from its frame and tap gently to remove any dust.

If the filter is really dirty, dip it into a natural detergent solution and flush with water.

Place the clean filter back in the frame and then carefully re-attach the filter frame.

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

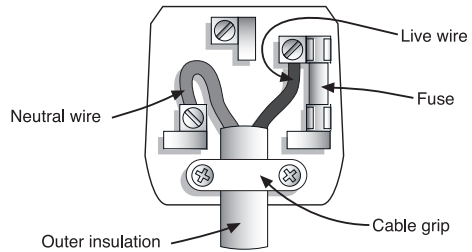

Ultimate Products Ltd.

Manor Mill, Victoria Street, Chadderton, Oldham, OL9 0DD

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



