



450W Glass Hot Plate
Instruction Manual

Please read all instructions carefully and retain for future reference.

Getting started

Remove the appliance from the box.

Remove any packaging from the box.

Place the packaging inside the box and either store or dispose of safely.

Ensure the appliance is correctly placed with its feet on a stable, heat resistant surface.

In the Box

Instruction manual

1 x warming plate

Features

LED control panel with thermostat control

3 heat settings

Countdown timer

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure they do not play with the appliance.

If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Do not leave this appliance unattended when connected to the mains supply.

The appliance must not be immersed in water or any other liquids.

This appliance contains no user serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.

Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.

The appliance must be unplugged from the power supply after use and whilst any maintenance such as cleaning is carried out.

The appliance must be used on a stable, heat resistant surface.

Do not use the appliance for any other purpose than that for which it is designed.

Ensure the supply cord is kept away from heat or sharp edges that could cause damage.



This appliance is intended for domestic use only. It should not be used for commercial purposes.

Do not use outdoors.

This appliance is not intended to be operated by means of an external timer or separate remote-control system.

Warning: do not cover this appliance.

Use of an extension cord with the appliance is not recommended.

Description of Parts



Instruction For Use

Before First Use

Note: There will be a faint odour when using the warming plate for the first time but this is normal and will fade with use.

Warning: The surface of this appliance will get hot during use with the maximum temperature of 150°C; please exercise extreme caution.

Plug the warming tray into the mains power supply and switch On if switchable.

The temperature can be adjusted to the desired heat by pressing the "Select" button to choose "Low", "Medium" or "High" temperature setting.

The LED display will flash the warming time, press the timer repeatedly to set the time. Each press increases the time by 1 hour, up to a max of 24 hours.

It is not recommended to keep this appliance on for more than 6-8 hours at any one time.

Once the desired time and heat have been set, press the "Power" button and the unit will heat up.

Pre-heat for 10 minutes, other than this period, do not operate the warming tray without anything on the heating plate.

Food kept warm on the warming plate must be pre-cooked and already hot as this appliance is not designed for heating from cold or frozen.

After use, turn the thermostat to the Off position and unplug the appliance from the mains supply and allow to cool thoroughly before storage.

Temperature Settings

Setting	Average Temperature
Low	110°C/230°F
Medium	130°C/266°F
High	150°C/302°F

Troubleshooting

Problem	Cause	Solution
Warming plate is not working.	Thermostat is set too low.	Increase the thermostat temperature setting.
	Plug fuse is blown.	Check fuse and replace if necessary.
	Plug is incorrectly inserted.	Fully insert plug into socket and switch on if switchable.
Food is not warm enough.	Thermostat is set too low.	Increase thermostat control.



Do's & Don'ts

- Unplug the appliance from the mains socket when not in use and before cleaning.
- Do not leave the buffet server unattended whilst warming food, always check food.
- Care should be taken not to touch the outer casing of the appliance whilst it is on.
- Do not move the appliance whilst it is on and warming food.
- Do not place food directly onto the warming tray.
- Do not place uncooked or frozen foods and meats in the warming pans or on the warming tray.

Care & Maintenance

- Always disconnect the appliance from the mains supply and allow to cool sufficiently before cleaning.
- Clean the appliance with a soft, damp, lint free cloth. Never immerse the appliance in water or any other liquids.
- Do not use harsh abrasives or cleaners.
- Wash the warming pans and lids with a mild household detergent.

Specifications

- Product Code: EK1470
- Voltage: 220-240V 50Hz
- Power: 450W
- Plug Fuse: 13A

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

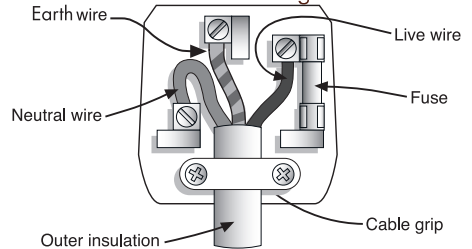

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP GLOBAL SOURCING,
Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:
UP Global Sourcing,
Manchester, OL9 0DD.

CD110113/MD000000/V1



MADE IN CHINA.