



1.8l Rice Cooker
Instruction Manual

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

Ensure the appliance is correctly placed with its feet on a stable, heat-resistant surface.

In the Box

Rice cooker

Tempered glass lid with steam vent

Non-stick coated bowl (1.8l)

Plastic spatula

Measuring cup

Mains cable

Instruction manual

Features

Cool touch handles

'Cook' and 'Keep Warm' settings

Stainless steel housing



Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Keep the appliance and its cord out of reach of children less than 8 years.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord or plug is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.

Do not leave this appliance unattended when connected to the mains power supply.

The appliance must not be immersed in water or any other liquid.

This appliance must be unplugged from the mains power supply after use and whilst any maintenance such as cleaning is carried out.

This appliance is not intended to be operated by means of an external timer or separate remote control system.

This appliance contains no user serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.

Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.

The appliance must be unplugged from the mains power supply after use and whilst any maintenance such as cleaning is carried out.

The appliance must be used on a stable, heat-resistant surface.

Never cook directly in the base unit; use the bowl provided.

Allow to cool before cleaning or maintenance.

Do not use the appliance for any other purpose than that for which it is designed.

Ensure that the supply cord is kept away from heat or sharp edges that could cause damage.

This appliance is intended for domestic use only; it should not be used for commercial purposes.

Do not use outdoors.

Use of an extension cord with the appliance is not recommended.

Description of Parts



Instructions for use

When using the rice cooker for the first time, clean the cooking bowl and glass lid with warm, soapy water, then dry thoroughly with a soft cloth.

Start by measuring out the required amount of rice using the measuring cup. One cup of uncooked rice will expand to become three cups of rice when cooked.

Before cooking, rinse the rice in a sieve until the water becomes clear.

Add the washed rice with the appropriate amount of water to the cooking bowl. Check the following table to see the advised amount.



Cups of uncooked rice required	Cups of water required
10	10-10.5
8	8-8.5
6	6-6.5
4	4-4.5
2	2-2.5

When placing the rice and water into the cooking bowl, be sure to check that the bottom of the bowl is dry. If not, use a dry cloth and wipe thoroughly.

Ensure that the rice cooker is on a level surface and place the glass lid onto the cooking bowl.

Plug the mains cable into the rice cooker and insert the plug into the mains power supply.

Push the front panel mounted switch downwards to begin cooking. The 'cook' light will illuminate. When the rice is cooked i.e. all the water has been absorbed by the rice, the switch will pop up and the 'warm' light will illuminate, indicating that the rice is cooked and ready to serve.

Do's and Don'ts

Do not immerse the rice cooker in water or any other liquid.

Ensure that the rice cooker is unplugged from the mains power supply before cleaning.

Do not clean the rice cooker, cooking bowl or glass lid with harsh, abrasive materials or cleaning products.

Do not leave the rice on the 'Keep Warm' setting for a long period of time, as it will discolour and spoil. This function is only intended for use during the meal.

Always replace the lid when not serving, in order to prevent the rice from drying or discolouring.

Care and Maintenance

Clean the stainless steel housing with a clean, dry, lint-free cloth.

Clean the cooking bowl and glass lid in warm, soapy water. Do not use a scouring pad or other abrasive materials.

Specifications

Product Code: EK1474

Voltage: 220-240V 50-60Hz

Power: 700W

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

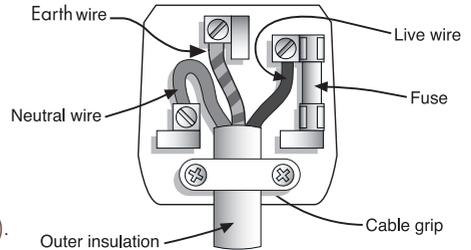

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP GLOBAL SOURCING,
Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:
UP Global Sourcing,
Manchester, OL9 0DD.

CD190213/MD090513/V2



MADE IN CHINA.