



Hotdog Maker
Instruction Manual

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of safely.

In the Box

Hotdog maker

Removable hotdog chamber

Tongs

Instruction manual

Features

Makes 2 hotdogs at any one time

Variable timer control

Auto pop-up

Slide out crumb tray for easy cleaning

Removable hotdog chamber

Cool touch housing

Cord storage



Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage on the rating plate matches your local network before plugging in.

Children from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not play with the appliance.

Cleaning and user maintenance should not be made by children unless they are older than 8 and supervised.

This appliance contains no user serviceable parts. Only a qualified electrician should carry out all repairs. Improper repairs may place the user at risk of harm.

If the supply cord or plug is broken, do not use the appliance and ensure that a qualified electrician fixes it.

Keep the supply cord away from heat or sharp edges that could cause damage.

Keep the supply cord out of reach of children.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not immerse the appliance in water or any other liquid.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance after a malfunction or if it has been dropped or damaged.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not leave the appliance unattended whilst it is in use.

Do not attempt to move the appliance during use.

Do not use the appliance for anything other than its intended use.

Do not use the appliance outdoors.

Do not use metal utensils with this appliance; use only plastic or wooden utensils to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or maintenance.


Always use the appliance on a stable, heat-resistant surface.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Description of Parts

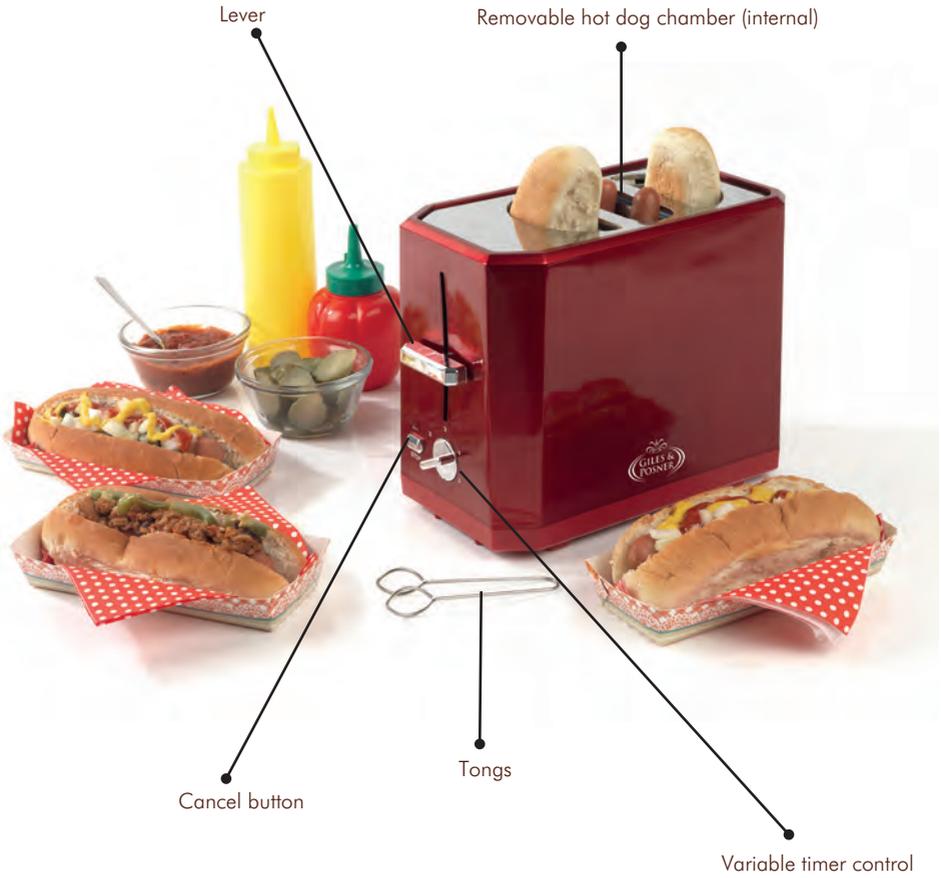



Instruction for Use

Before First Use

Before using the hotdog maker for the first time, clean it with a soft, damp cloth and dry thoroughly.

Note: When using the hotdog maker for the first time a slight odour may be emitted; this is normal and will soon subside. Ensure that there is sufficient ventilation around the hotdog maker.

The hotdog maker is designed to hold two standard size hotdogs and two standard size buns only. Do not use jumbo size hotdogs or buns as these might fit into the basket initially; however once the hotdog maker is on, they will swell with the heat and may jam the appliance.

If the hotdogs get jammed into the basket, let them cool for a while until they contract, then they can be removed easily.

Not all hot dogs and buns are the same therefore you will need to adjust the variable heat controller accordingly. Room temperature hot dogs will cook faster than ones just taken from the fridge.

Do not use frozen hotdogs; ensure that you thaw them thoroughly before using the hotdog maker.

Using the Hotdog Maker

Plug the hotdog maker into the mains power supply.

Insert the chamber into the hotdog maker.

Place the hotdogs into the chamber, carefully open the two hot dog buns and place them in the semicircle openings. Adjust the heat control to the required setting and push the lever down.

After the toasting time is completed, the chamber and bun compartment will automatically pop-up. Press the Cancel button at anytime during the cooking process to manually stop the hotdog maker from cooking.

Use the tongs provided to remove the hotdogs and buns.

Caution: Do not remove the chamber after use, as this will be very hot. Wait for this to cool fully before removing.

Unplug the hotdog maker from the mains power supply; once cool carefully remove the chamber and the crumb tray to clean.

Cleaning & Maintenance

Before attempting any cleaning or maintenance, unplug the hotdog maker from the mains power supply and allow it to cool fully.

Clean the hot dog maker with a soft, damp cloth and dry thoroughly.

Do not use harsh or abrasive scourers to clean the hotdog maker.

Never immerse the hotdog maker in water or any other liquid.

Remove the crumbs by cleaning the crumb tray regularly.

Storage

When storing, ensure that the hot dog maker is cool, clean and dry.

Store in a cool, dry place.

Never store the hot dog maker when it is still hot.

Do not wrap the power cord tightly around the hot dog maker; keep it loosely coiled.

Specifications

Input: 220 - 240V~ 50Hz

Output: 750W

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

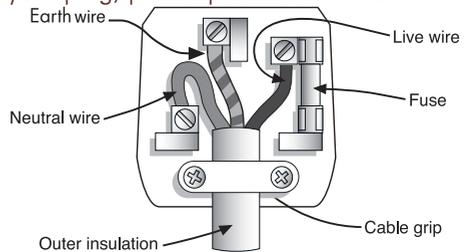

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP GLOBAL SOURCING,
Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:
UP Global Sourcing,
Manchester, OL9 0DD.

CD220713/MD000000/V1



MADE IN CHINA.