



Candy Floss Maker
Instruction Manual

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store for future reference.

In the Box

Candy Floss Maker

Measuring spoon

25 candy floss sticks

Instruction manual

Features

Removable metal sugar pan

Detachable plastic bowl

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.



This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not move the appliance whilst it is in use.

Do not use sharp or abrasive items with this appliance; use only plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Keep the appliance away from flammable materials.

Caution: Hot Surface.

Description of Parts





Instructions for Use

Before Using the Candy Floss Maker

Before using the Candy Floss Maker for the first time, clean the sugar pan and plastic bowl in warm, soapy water, then rinse and dry thoroughly.

Wipe the base of the Candy Floss Maker with a soft, damp cloth and allow to dry thoroughly.

Never immerse any electrical components of the Candy Floss Maker in water or any other liquid.

To assemble the Candy Floss Maker, place the plastic bowl onto the base and fix it into position by turning it in an anticlockwise direction until it clicks into place.

Position the sugar pan onto the driving shaft in the centre of the sugar pan.

Using the Candy Floss Maker

Carefully add $\frac{1}{2}$ measuring spoon (provided, or alternatively add 1 teaspoon) of sugar into the central well of the sugar pan. Do not add any more than this amount of sugar to the sugar pan at any one time, as overfilling will cause the sugar to overflow out of the sugar pan during operation.

Do not add sugar to the sugar pan whilst the Candy Floss Maker is switched on and in operation, as this will result in sugar overflowing from the pan.

Plug the Candy Floss Maker into the mains power supply and switch it on using the 'On/Off' switch. The sugar pan will spin and start to heat. It will take approximately 2–3 minutes for the candy floss to form.

Use a wooden skewer or cone to collect the candy floss. Slowly roll the skewer or cone around the plastic bowl in a clockwise direction.

Once the candy floss has increased in volume, you can then roll the skewer around the top of the sugar pan.

To refill the Candy Floss Maker, switch it off and carefully add $\frac{1}{2}$ measuring spoon (provided, or alternatively add 1 teaspoon) of sugar into the central well of the sugar pan.

Warning: Ensure that you do not touch the sugar pan, as it will become very hot during and immediately following use.

Warning: Do not put the sugar into any of the openings in the base. Sugar should only be added to the sugar pan.

Cleaning & Maintenance

Unplug the Candy Floss Maker from the mains power supply and allow it to cool thoroughly before performing any cleaning or maintenance.

Remove the plastic bowl and sugar pan and clean with warm, soapy water, then rinse and dry thoroughly.

Wipe the base of the Candy Floss Maker with a soft, damp cloth.

Never immerse any electrical components of the Candy Floss Maker in water or any other liquid.

The plastic bowl and the sugar pan are not suitable for dishwasher use.

Storage

Ensure that the Candy Floss Maker is cool, clean and dry.

Store in a cool, dry place.

Specifications

Product code: EK1532

Input: 220–240 V ~ 50 Hz

Output: 500 W

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

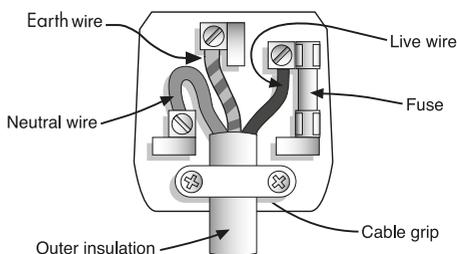

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely.

Never attempt to

reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP GLOBAL SOURCING,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:
UP Global Sourcing,
Victoria Street, Manchester **OL9 0DD. UK.**

CD020513/MD070414/V1



MADE IN