



Chocolate Fountain
Instruction Manual

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of carefully.

In the Box

Chocolate fountain base

3 tier tower section

Auger

Instruction manual

Features

Simple to use

Easy to clean

Stainless steel body

Thermostatic temperature control



Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage on the rating plate matches your local network before plugging in.

This appliance can only be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Keep the supply cord out of reach of children.

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Do not immerse the appliance in water or any other liquid.

If the supply cord or plug is broken, do not use the appliance and ensure it is fixed by a qualified electrician.

Do not touch the appliance during use, as it will get very hot and could cause injury.

This appliance contains no user serviceable parts. All repairs should only be carried out by a qualified electrician. Improper repairs may place the user at risk of harm.

Do not use the appliance after a malfunction or if it has been dropped or damaged.

Do not leave the appliance unattended whilst connected to the mains power supply.

Keep the supply cord away from heat or sharp edges that could cause damage.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not leave the appliance unattended whilst it is in use.

Always unplug the appliance after use and before any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface.

Do not attempt to move the appliance during use.

This appliance is only intended for chocolate, do not use it for anything else.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

Do not use outdoors.

Use of an extension cord with the appliance is not recommended.

Do not use the appliance for anything other than its intended use.

This appliance is intended for household use only. It should not be used for commercial purposes.

Description of Parts



3 tier plastic tower

Stainless steel chocolate bowl

Base

On/Off indicator light

Control switch

Instructions for Use



Before Using the Chocolate Fountain

Before using your chocolate fountain, clean the tower and the auger in warm, soapy water and dry thoroughly. Wipe down the base with a damp cloth; do not immerse it in water or any other liquid.

Assembling the Chocolate Fountain

Place the chocolate fountain on a stable, level, heat-resistant surface; this ensures a smooth flow of chocolate.

In the centre of the base bowl there are three locating pins for the three tier tower and a triangular motor spindle for the auger. Position the tower on the locating pins in the base. Add the bottom two tiers first to build the tower.

When the tower is in place, pass the auger down through the top of the tower with the triangular locating slot facing downwards.

Rotate the auger back and forth slightly until it drops into place over the motor spindle.

Now, fit the top tier onto the tower.

Make sure that the control switch is in the Off position and plug the mains power cord into the mains power supply.

Turn the switch to the Heat/Motor position and ensure that the auger is spinning freely.

Switch off the chocolate fountain and unplug from the mains power supply.

Preparing the Chocolate

The chocolate fountain will work with most types of chocolate, but especially those with a high cocoa solid content. Chocolate such as Belgian or couverture requires little or no additional oil.

Milk and dark chocolate will work well, but you should thin it by adding some light vegetable or sunflower oil.

Light vegetable or sunflower oil will not alter the taste as it is fairly tasteless when mixed with chocolate.

You will need approximately 750g of chocolate and 200ml of oil, if required.

Melting Chocolate

In the Microwave

Put approximately 750g of chopped or grated chocolate into a microwaveable bowl.

Place the bowl into the microwave for 2-3 minutes, depending on the wattage of the microwave.

Check the chocolate frequently as it can burn easily.

Stir in approximately 200ml of vegetable or sunflower oil (if required) and mix thoroughly until the chocolate is smooth.

On the Hob

If you do not have a microwave, place the chocolate in a small, heat proof bowl or saucepan.

Fill a larger pan with water and bring it to the boil. When the water has boiled, turn off the heat. Place the bowl of chocolate into the hot water and stir carefully until it has fully melted.

In the Base of the Chocolate Fountain

Chocolate can be melted in the base of the fountain by adding chopped or grated chocolate to the bowl until it is approximately $\frac{3}{4}$ full.

Turn the switch to the heat/motor position and wait approximately one hour for the chocolate to melt, stirring occasionally.

Ensure that the chocolate fountain does not get left unattended when it is in use as chocolate can burn easily.

Add approximately 200ml of vegetable or sunflower oil (if required) and mix thoroughly until the chocolate is smooth.

Using the Chocolate Fountain

Assemble the chocolate fountain as described above and ensure it is placed on a level, stable, heat-resistant surface.

Turn the switch to the Heat/Motor position and allow the chocolate fountain to warm up for approximately 3-4 minutes.

Next, add the melted chocolate from either the microwave or the hob and fill to just below the rim, taking care not to overfill.

The melted chocolate will be drawn to the top of the chocolate fountain by the rotating auger and will start flowing over the tiers.

If the chocolate is too thick to flow smoothly, add a little more oil.

Once the chocolate is cascading smoothly, you can begin dipping food into the melted chocolate.



Cleaning & Maintenance

Always unplug the chocolate fountain from the mains power supply before cleaning and storing. Clean the tower and the auger of the chocolate fountain thoroughly in warm, soapy water and dry thoroughly.

Never clean the tower or auger in a dishwasher.

Do not immerse the base in water or any other liquid; clean it with a damp cloth and dry thoroughly.

Important: Never pour excess chocolate down the sink as melted chocolate solidifies when it cools and could block your drains.

Troubleshooting

Problem	Cause
There is an uneven flow of chocolate.	The base is not level. The chocolate is not evenly distributed in the bowl.
There is an intermittent flow of chocolate.	Check for blockages at the base of the tower.
There is a slow flow of chocolate.	There may be an air bubble in the auger; stop and restart the motor.
The chocolate is dripping rather than flowing.	The base is not level. The chocolate is too thick. There isn't enough chocolate in the bowl.
Chocolate is very thick.	More oil is needed to reduce the thickness.
Chocolate is lumpy.	The chocolate is either burnt or has been overheated.

Specification

Input: 220-240v~50Hz

Output: 85W

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

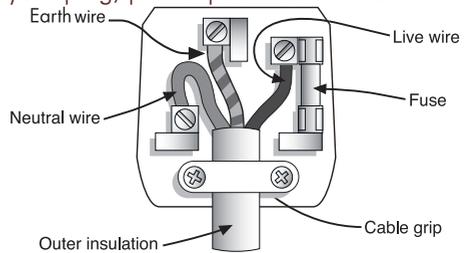

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP GLOBAL SOURCING,
Manchester, OL9 0DD.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:
UP Global Sourcing,
Manchester, OL9 0DD.

CD030513/MD240613/V2



MADE IN CHINA.