

AMERICAN
originals

PLEASE
RETAIN
Information
FOR FUTURE
REFERENCE!

**Tasty
Treats!**

**INSTRUCTION
MANUAL**



1950'S STYLE RETRO

Waffle
Maker



Remember though, read all of the instructions carefully and keep them for future reference.

SAFE & SOUND

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of your local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning

or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Don't immerse the appliance in water or any other liquid.

Don't operate the appliance with wet hands.

Don't leave the appliance unattended whilst connected to the mains power supply.

Don't remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Don't use the appliance for anything other than its intended use.

Don't use any accessories other than those supplied.

Don't use this appliance outdoors.

Don't store the appliance in direct sunlight or in high humidity conditions.

Don't move the appliance whilst it is in use.

Don't touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Don't use sharp or abrasive items with this appliance; use only plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after

use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Always preheat the cooking plate before starting to cook.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The door or the outer surface of the appliance may get hot during operation.

Warning: Keep the appliance away from flammable materials.

 **Caution:** Hot Surface - Do not touch the hot section or heating components of the appliance.

LET'S BEGIN

Remove the appliance from the box.
Remove any packaging from the appliance.
Place the packaging inside the box and store or dispose of safely.

LET'S SEE WATCHA GOT

Waffle maker
Instruction manual

COOL CHARACTERISTICS

Locking lid latch
Non-stick cooking surface for easy cleaning
Cord wrap for storage
Automatic temperature control
Power and ready light indicator

ALL OF THE BITS



IT'S PARTY TIME

BEFORE USING YOUR WAFFLE MAKER

Before using your waffle maker for the first time, clean it with a soft, damp cloth and dry thoroughly.
Lightly coat the cooking plates with a small

amount of vegetable oil, applied using either an oil spray or a paper towel. The oil will help to protect the quality of the cooking plates.

Note: During the first use, there may be a slight odour or smoke emitted from the waffle maker. The residues burning off the non-stick cooking plates cause this. Allow the waffle maker to preheat until the smoke and odour cease.

MAKING YUMMY WAFFLES

Plug your waffle maker into the mains power supply; the red indicator light will illuminate to show that it is heating up.

Preheat your waffle maker for approximately 3–5 minutes.

When your waffle maker is ready to use, the green ready light will turn off.

Open the lid carefully using heat-resistant oven gloves and add prepared waffle batter to each of the wells.

Don't overfill your waffle moulds otherwise the waffles will not raise.

Close the lid of your waffle maker and cook for approximately 5–10 minutes.

Note: Steam may be emitted from your waffle maker during cooking.

Open your waffle maker using heat-resistant oven gloves and remove the waffles carefully, as they will be hot.

When cooking more than one batch of waffles, close the lid after removing each batch to maintain the heat in your waffle maker.

It is normal for the baked waffles to appear darker on the bottom than on the top. This is due to the batter rising and the waffle's contact with the heating plates.

CLEANING & MAINTENANCE

Always unplug your waffle maker from the mains power supply before attempting any cleaning or maintenance.

Ensure that your waffle maker has completely cooled before cleaning, as it gets very hot during use.

Clean the upper and lower cooking plates with a soft, damp cloth and dry thoroughly.

Wipe the exterior with a damp cloth and dry thoroughly.

Never immerse your waffle maker in water or any other liquid.

Your waffle maker is not suitable for dishwasher use.

Do not use harsh or abrasive cleaning detergents or scourers.

STORAGE

Before storing your waffle maker, ensure that it has cooled and dried fully.

Store in a clean, dry place.

Wrap the mains cord around the base of your waffle maker for storage.

SPECIFICATIONS

Input: 220–240 V~ 50 Hz

Output: 700 W

TIP

Using the basic waffle recipe you can create many variations of dessert by adding different toppings from ice cream, to fruit, to chocolate sauce and whipped cream. Follow one of the quick and easy recipes in this manual for a delicious treat!

BASIC WAFFLES

INGREDIENTS

150 g plain flour
2 tsp baking powder
1 tbsp sugar
1 egg
300 ml milk
2 tbsp vegetable oil
Pinch of salt

METHOD

Plug your waffle maker into the mains power supply and allow it to heat up, ensuring that the lid is closed.

The green light will turn off after approximately 5 minutes indicating that your waffle maker is ready to use.

Meanwhile, sift the flour and baking powder into a large bowl, then stir in the sugar and salt.

Make a well in the centre of your mixture.

In a separate bowl, beat the egg, milk and oil together, then pour this mixture into the well of your dry ingredients.

Mix all of the ingredients together to form a smooth, thick batter.

Spoon the mixture into each waffle mould in your waffle maker and carefully close the lid.

We recommend using 3 tbsp of mixture per waffle.

Cook your waffles for 8–10 minutes or until golden.

Carefully remove your waffles using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack.

APPLE AND CINNAMON WAFFLES

INGREDIENTS

1 apple, grated
150 g plain flour
2 tsp baking powder
1½ tsp cinnamon
1 tbsp sugar
1 egg
300 ml milk
2 tbsp vegetable oil
Pinch of salt

METHOD

Plug your waffle maker into the mains power supply and allow it to heat up, ensuring that the lid is closed.

The green light will turn off after approximately 5 minutes indicating that your waffle maker is ready to use.

Meanwhile, sift the flour, baking powder and cinnamon into a large bowl, then stir in the sugar and salt.

Make a well in the centre of your mixture.

In a separate bowl, beat the egg, milk and oil together, then pour this mixture into the well of your dry ingredients.

Mix all of the ingredients together to form a smooth, thick batter.

Spoon the mixture into each waffle mould in your waffle maker and carefully close the lid.

We recommend using 3 tbsp of mixture per waffle.

Cook your waffles for 8–10 minutes or until golden.

Carefully remove your waffles using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack.

STICKY BANANA WAFFLES

Serves 4

INGREDIENTS

150 g plain flour
2 tsp baking powder
1 tbsp sugar
1 egg
300 ml milk
2 tbsp vegetable oil
Pinch of salt

FOR THE YUMMY TOPPING

1 banana, sliced
Vanilla ice cream
Maple syrup
Flaked almonds

METHOD

Plug your waffle maker into the mains power supply and allow it to heat up, ensuring that the lid is closed.

The green light will turn off after approximately 5 minutes indicating that your waffle maker is ready to use.

Meanwhile, sift the flour and baking powder into a large bowl, then stir in the sugar and salt. Make a well in the centre of your mixture.

In a separate bowl, beat the egg, milk and oil together then pour this mix into the well of your dry ingredients.

Mix all of the ingredients together to form a smooth, thick batter.

Spoon the mixture into each waffle mould in your waffle maker and carefully close the lid.

We recommend using 3 tbsp of mixture



per waffle.

Cook your waffles for 8–10 minutes or until golden.

Carefully remove your waffles using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack.

Once cool, top with the sliced banana, vanilla ice cream and a handful of flaked almonds.

Drizzle over the maple syrup.





CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

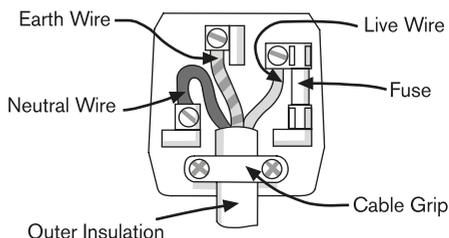

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP GLOBAL SOURCING

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.


In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



MADE IN CHINA

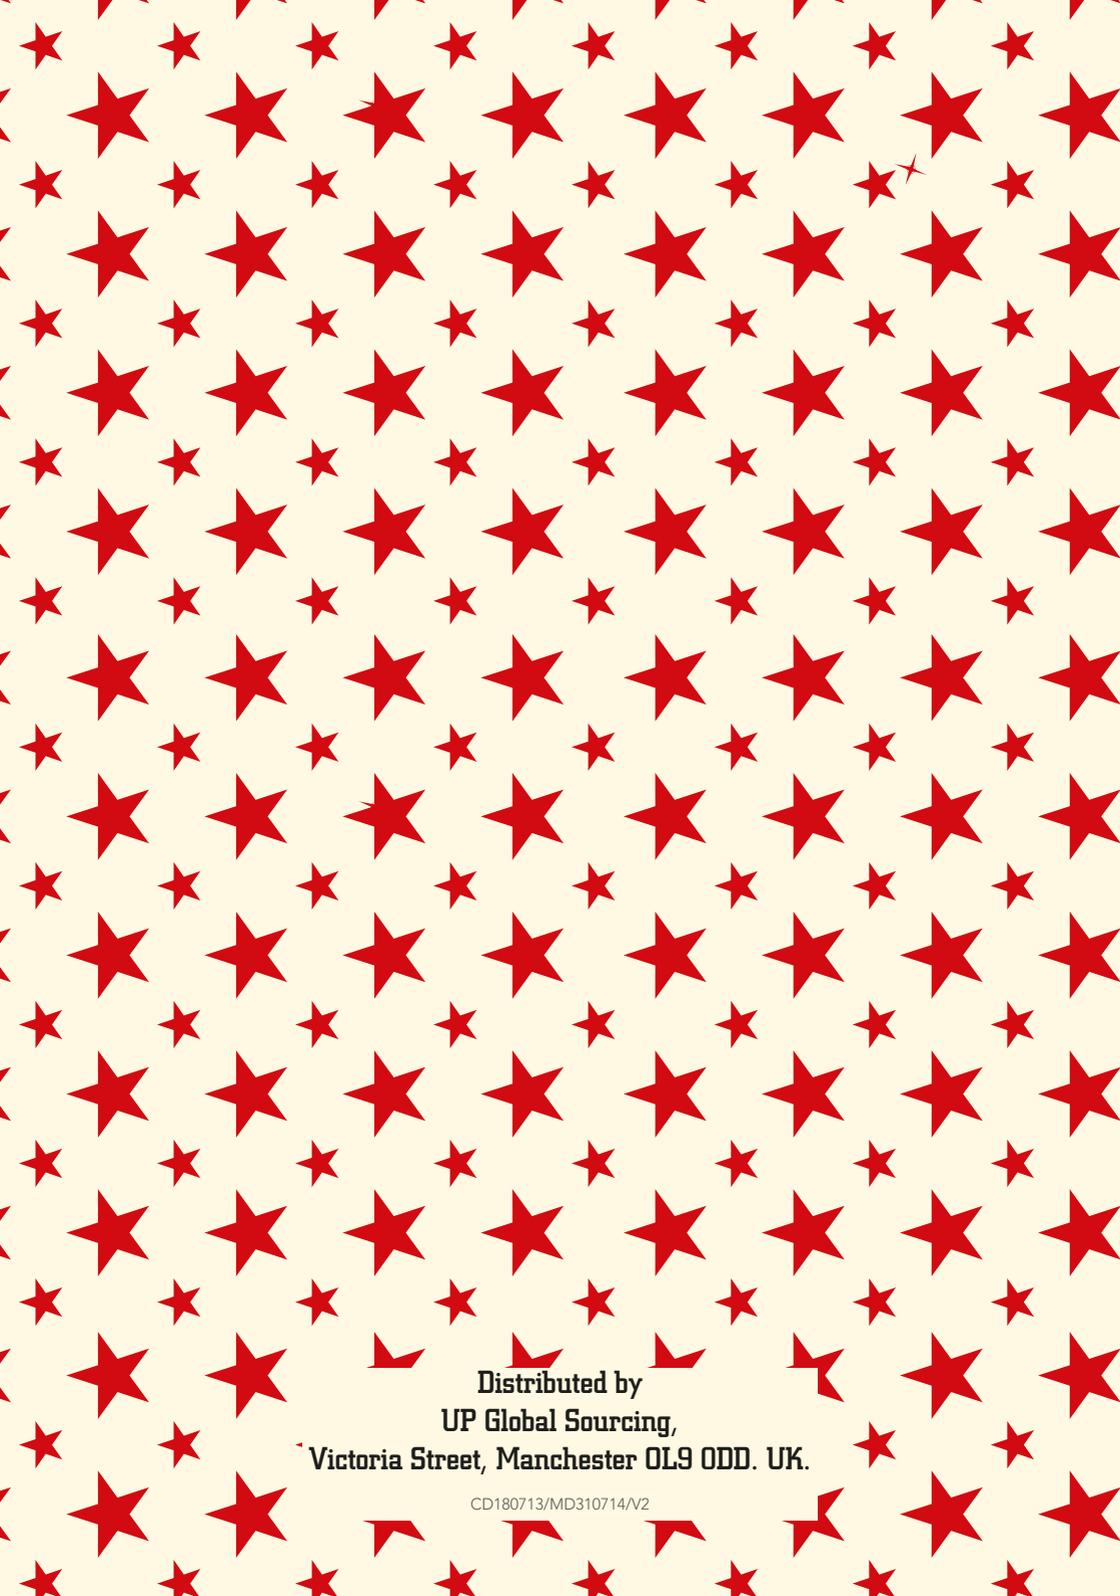

Distributed by
UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK.

CD180713/MD310714/V2